## 7. Technical Data

#### Specifications

#### Specifications

High Suction High-Flow Dial Gauge reading: 0 to -760mmHg (0 to -100kPa) Low Suction High-Flow Dial Gauge reading: 0 to -200mmHg (0 to -25kPa) Thoracic Drainage High Flow Dial reading: 0 to -70cmH<sub>2</sub>O (0 to -7kPa) Gauge accuracy - 2.5% full scale

## Fittings

British Standard Direct Probe 9/16 unf L/H screw fitting (to remote couplings)

#### Weight/Dimensions: S723/S724/S725

Weight	500g
Height	175mm
Width	75mm
Depth	143mm (with BS probe)
Depth	106mm (with 9/16 unf fitting)

## **Test Specifications**

High

Suction Controller vacuum source at = -500mmHg (-66.5kPa) Outlet flow = 40LPM Controller reading gain from = 0 to -450mmHg Flow indications:

at - 100mmHg (-13.3kPa) = 20LPM

at - 200mmHg (-26.6kPa) = 30LPM

at - 300 to -400mmHg (-39.9 to -59.8kPa) = 32LPM

Air evacuation of an 1800mL Receiver Jar at - 500mmHg = 7 to 8 seconds.

## Warranty

It is recommended that a Suction Controller is maintained/inspected at least every 12 months. Each unit comes complete with a Manufacturer's 7 Year Warranty and are MR Conditional (High Suction only with the yellow triangular MR sign present on the gauge face – see below )\*.



Doc Ref: Issue No.	Doc-OP-4401F 4
Date	20.08.2021 *ASTM F2503-08
1 22 10 25 55 10 VI 12	1 15 15 15 16 16 16 16 17 16 17





## S7 Series Medical Suction Controller (Flag Type)

Instructions for use



#### 1. Introduction

The Oxylitre S7 series Suction Controllers have been designed specifically for Medical use. Products are available as colour coded High Suction-High Flow (Yellow), Low Suction-High Flow (Black) and Thoracic Drainage (Green) Models with either Direct or Remote (Rail or "V" male) fittings. The Suction Controllers comply with the requirements of BS EN ISO 10079-3 and Medical Device Directive 93/42/EEC.

#### 2. Specifications

#### Vacuum Source Connector

The S7 series Suction Controller are available with either a British Standard (BS5682) probe or a 9/16 unf L/H fitting. The 9/16 unf L/H connection can be attached to various types of remote fittings i.e. Rail or "V" male mounted, with remote Hose Assemblies.

#### Patient Inlet Connection and Filter

The High Vacuum-High Flow and Low Vacuum-High Flow models are fitted with a Disposable Hydrophobic Filtration Cartridge that has been designed specifically to prevent the ingress of fluid and/or bacteria into the Suction Controller and the Vacuum Pipeline System. The Thoracic Drainage model is fitted with a bacterial filter cartridge. In all cases the Inlet Connector is an integral part of the Filter Cartridge.

#### Vacuum Gauge

Each Suction Controller is fitted with a easy to read, dual scale Gauge

Scale readings:

High Suction (Yellow Banding)	= 0 to -760mmHg (0 to -100kPa)
Low Suction (Black Banding)	= 0 to -200mmHg (0 to -25kPa)
Thoracic Drainage (Green Banding)	= 0 to -70cmH <sub>2</sub> O (0 to -7kPa)

#### Safety Valve

The units are fitted with an internal safety valve system. This will protect the Suction Controller from being damaged in the event of the unit being accidentally connected to a positive pressure source.

#### **Receiver Jars and Tubing**

The Oxylitre Suction unit has been designed to connect to the following recommended Fluid Receiver Jars:

 Oxylitre 1800mL Receiver Jar:
 Ref: S7500B (Rail Mounted).

 Ref: S7500A ("V" Bracket Mounted).

 Oxylitre A/S Suction Tubing:
 Ref: VAC201 (per 1 meter Length) - Yellow.

Receiver Jars with Hydrophobic Filter protected Disposable Liners may be used.

#### 3. Operating the Suction Controller

Connect the Suction Controller to the Vacuum source i.e. a Terminal Unit. Turn the Controller on by moving the ON/OFF Flag on the side of the unit 180° so that the ON is showing. The level of vacuum required can then be adjusted by turning the Control Knob on the top of the Controller (Increase – turn clockwise; Decrease – turn anti-clockwise). To pre-set the vacuum level before use and after connecting the Suction Tubing to the filter, fully occlude this tubing (e.g. by folding) between the Controller and the Receiver Jar. Turn the Control Knob until the required level of suction on the gauge on the front of the Controller is obtained. The unit should be switched off by moving the ON/OFF Flag on the side of the Controller back to the fully OFF position whenever not in use. The Controller should never be left or operated in any other position other than fully OFF or fully ON.

# Note: Occluding the Suction Tube when setting the suction level is very important and ensures that the patient does not receive excessive suction<sup>1,2</sup>.

- 1. Excerpt from American Association of Respiratory Care 2010 published Guidelines 'Endotracheal Suctioning of Mechanically Ventilated Patients with Artificial Airways'; Section 2.3
- 2. Enhancing the Safety of Medical Suction Through Innovative Technology; Patricia Carroll; RT: For Decision Makers in Respiratory Care February 2008

Release the Suction Tube and straighten out so that the vacuum begins to evacuate connected Receiver Jar. The Suction supply can be turned off immediately by turning the Flag to the OFF position. This will automatically drain off all the remaining suction accumulated in the Suction Tubing and Receiver Jar. Note that the setting applied will be maintained when the unit is switch on again. Ensure the Receiver Jars' "Float Assembly" is operational, i.e. the float moves up/down freely (Liner type Receptacles may be fitted with a Filter/Fluid Trap). Inspect all Receiver Jar components for wear or damage. Replace damaged components if necessary.

When an Oxylitre 1800 ml graduated Jar is full, pull the male adapter probe from the top of the Jar lid and unhook the retaining spring clips. Remove the Jar carefully from the cradle and dispose the contents appropriately. Unscrew the Float Assembly from the base of the Jar Lid, then Float Assembly, Jar Lid, and Jar must be thoroughly cleaned and re-assembled in the reverse order.

WARNING: There are internal 'stops' to limit the travel on the control knob. Do not try to force the control knob past these points or damage could occur to the device. Similarly do not attempt to overtighten the grub screws on the control knob for the same reason.

#### 4. Replacing the Filter

After using the equipment, inspect the White Filter Element in the Filter Cartridge fitted at the base of the Suction Controller. Replace the Filter Cartridge if found to be discoloured or wetted. A contaminated Filter may restrict the performance of the product. To replace the Filter, simply disconnect the Suction Tube (if connected) from the Filter Cartridge then unscrew the Cartridge (anti-clockwise) from beneath the Suction Controller. Screw the replacement Filter Cartridge onto the unit hand tight.

#### 5. Cleaning

Prior to use, the device Filter Cartridge must be inspected as stated in above section. The Suction unit should be cleaned on a regular basis as per the organisations contamination control policies. All external surface areas are to be cleaned by wiping only. A clean cloth damped with a diluted solution of detergent such as Dettol may be used. Alcohol based wipes may be used after ensuring that they do not damage any surface areas. To clean internal areas, the device will require dismantling and must only be performed by qualified Medical Engineers only. The 1800mL Oxylitre Receiver Jar, Jar Lid, Float Assembly & Seals is Autoclaveable to 134°C (see Doc-OP 4403).

#### 6. Maintenance

A medical Suction Controller forms part of an essential life supporting system and must be treated with care. It is recommended that each device should be regularly maintained and inspected at least every 12 months (and any faulty parts replaced) to ensure that the quality of the unit is retained, and that a Major Service be conducted after 5 years from purchase (using Service Kit SK17). Qualified Medical Engineers only should carry out servicing.

#### 7. MR Conditional

A spatial field gradient of 100.4 T/m (= 10040 G/cm) has been determined to give rise to a 45° defection angle (extrapolated) based on the measurements made a 3T MRI scanner according to ASTM F2052-15 For service enquiries and information please contact Oxvlitre to arrange a guotation etc.

## WARNING: NEVER USE FAULTY EQUIPMENT.

#### Replacement Filters

Ref: S750 (Bacterial/Hydrophobic) or S760 (Laser/Diathermy) per box of 30 units.

#### Accessories and Replacement Jar components

a.	Ref: S6100	Oxylitre Unbreakable 1800ml Jar
b.	Ref: S7130	Float Assembly Complete
C.	Ref: S7520A	Suction Jar Lid
d.	Ref: S7510A	Suction Jar Cradle & "V" Plate Fitting
e.	Ref: S7510B	Suction Jar Cradle & Rail Clamp Fitting
f.	Ref: S7525	Male Tapered Suction Connector
g.	Ref: 180FFM	Suction Connecting Tube